

# Anne Pro Wireless Mechanical Keyboard User Manual

## Basic Function:

### Direction Keys/F1-F12/WinLock/Lights/Others

**Direction Keys:** ↑ ↓ ←→

Default Settings included 2 sets direction keys as below:

Fn+W= ↑

Fn+S = ↓

Fn+A= ←

Fn+D= →

Fn+I= ↑

Fn+k = ↓

Fn+J= ←

Fn+L= →

### Fn Keys:

Fn+1=F1

Fn+2=F2

Fn+3=F3

Fn+4=F4

Fn+5=F5

Fn+6=F6

Fn+7=F7

Fn+8=F8

Fn+9=F9

Fn+0=F10

Fn+“-”= F11

Fn+“+”= F12

### **Windows Lock**

Fn+Win=WinLock

### **Backlit Control System**

Fn+U= Backlight Mode Switching

Fn+Y= Brightness Regulation

Fn+T= Backlight Speed Adjustment

Fn+R=Backlight On/Off

### **Other System Key**

The Anne Pro is able to perform all the functions of a normal 104 key layout keyboard.

Fn+O= Scroll Lock

Fn+P=Pause Break

Fn+|=Print Screen

Fn+;=Page Up

Fn+”=Page Down

Fn+.>=Insert

Fn+[{=Home

Fn+]}=End

### **Bluetooth Settings:**

The Anne Pro Mechanical Keyboard has an integrated Bluetooth 4.0 BLE Transmission/Reception

## Module

1. Win7 does not support Bluetooth 4.0 BLE Protocol, the driver is needed(Click to download here)
2. Win8/10 support Bluetooth 4.0 Protocol defaulted, please plug and play without a driver.
3. Mac is the same as Win8/10.
4. Android Devices need to be upgraded to Version 4.0 operating system or later.
5. iPhone/iPad's iOS needs to be upgraded to iOS 7.0 or later.

Note1: Win7 should adjust Anne Pro to L1 Mode to get it connected (a little bit higher battery consumption), default setting is L0 Mode (Low Battery Consumption)

Note2: Certain Android devices are known to have connection issues with the Anne Pro despite being on Android 4.4.

Basic Function of Bluetooth Configuration Mode:

Press Fn+B to enter Bluetooth Configuration Mode.

Press ESC to exit Bluetooth Configuration Mode.

### **Enable/Disable Bluetooth on the Anne Pro:**

#### **Enable:**

Step 1: Fn+B to enter Configuration Mode

Step 2: "+" key will keep flashing until it is connected to a device.

Step 3: Press "ESC" to exist Configuration Mode

#### **Disable:**

Step 1: Fn+B to enter Configuration Mode.

Step 2: Press the "-" key.

Step 3: Press "ESC" to exist Configuration Mode

Bluetooth mode is now disabled.

### **Device Saving:**

Anne Pro supports saving up to 4 devices Bluetooth connection at the same time, just press 1/2/3/4 during Configuration Mode to switch them.

Step 1: Fn+B Enter Configuration Mode

Step 2: Press "1" to choose Number 1 device, Key"1" will not stop flashing until it is connected.

Step 3: Step "3" to exit

1= A Device

2= B Device

3= C Device

4= D Device

### **L0/L1 Mode Switching:**

L1 Mode is specially for compatibility with Windows 7, which means that to use the Anne Pro with a Windows 7 system, you need to switch your keyboard into L1 mode.

Step1 : Fn+B Enter Configuration Mode

Step2 : Fn+0 to switch L0/L1

Step3 : ESC to Exit

Note1 :

L0 Mode: Press "0" Green Light on means it is L0 Mode

L1 Mode: Press "0" Yellow Light on means it is L1 Mode (For Win7)

Note2:

A few Bluetooth chip will support L0 Mode after install the driver, like some Intel chip set.

### **Win7 Driver Installation & Instruction**

Win7 does not support Bluetooth 4.0, so please follow the below instruction:

1. Make sure your computer has the Bluetooth 4.0 Modular or use ours.
2. Install the BLE Driver.

Note: If your computer's Bluetooth Modular is 2.0/3.0, it needs to be shut down.

1. If your computer does not have Bluetooth Modular, then ignore note 1.
2. Do not plug in our 4.0 adapter before you disable the original one and install the new driver.

After you install the driver, please switch your keyboard to L1 Mode.

Some of the Intel Chip set will be fine without the switching to L1.

<http://pan.baidu.com/s/1hrFxiCk>

#### **Win8/10 Operating Guide:**

Win8/10 support Bluetooth 4.0 already, if your computer does not have Bluetooth or it is not 4.0(Disable it while it is not 4.0), then you need to plug in the External Bluetooth 4.0 Adapter(Driver install automatically ).

#### **Hardware Updates:**

[http://www.obins.net/anne\\_manual\\_book/annefw.html](http://www.obins.net/anne_manual_book/annefw.html)